

# VITINNI™

## VITINNI MULTI-SECTION FRYING PAN

### USER MANUAL

Model Number: SD-GPA3-32X26

SAP Code: JF07516001



**FOR DOMESTIC USE ONLY**

**PLEASE READ INSTRUCTIONS CAREFULLY BEFORE USE**

**RETAIN THIS MANUAL FOR FUTURE REFERENCE**

Fantastic multi-section frying pan from Vitinni. This clever kitchen essential makes it even easier to fry or griddle multiple ingredients at the same time, perfect for putting together a fried breakfast but versatile enough for any meal!

**Key features:**

100% cast aluminium ~ Durable for everyday use ~ Easy to clean ~ Stain-resistant

Dimensions: 49cm (L) x 35cm (W) x 3cm (H).

**Assembly instructions:**

The box contains 1 main pan section, 1 handle, 1 screw, 1 washer and 1 screw block. You will require a screwdriver (not included).

- 1) Insert the screw block into the rectangular slot on the edge of the main pan section.
- 2) Slot the handle onto this edge of the pan – the screw hole should line up with the block.
- 3) Ensure the washer is on the screw, then insert the screw into the hole.
- 4) Screw until firm and stable – do not overtighten as this may damage the parts.

**CAUTION: pan will get hot during use. Only use the handle to move the pan, and when setting it down, ensure it is placed on a heat-resistant surface. Never touch the pan with bare hands.**

**Ensure it is cool before cleaning; clean after each use and store in a safe, dry place.**

**This product is not dishwasher safe.**

**Environmental protection:**



To avoid environmental or health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

**GUARANTEE AND SERVICE**

Your new VITINNI™ product comes with a 12 month warranty.

Defects affecting product functionality may be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. This does not apply to damage or wear sustained by improper use of the accessories or the appliance. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

**CUSTOMER SERVICE**

If you wish to return your product for a full refund the item must be unused, in its original packaging and returned in a sellable condition. Please contact our Customer Service team within 24 hours who will be able to assist with your enquiry

The product is not user-serviceable; do not attempt to repair it yourself as this may put you at risk of harm from live components, and will also void your warranty.

If the appliance is not working please read the instructions and check the plug, fuse, and circuit breaker. If this doesn't solve the problem please ring our Customer Service team, as they may be able to offer advice.

If you ring Customer Service, please have the SAP code ready to help us assist you with your enquiry. This can be found on page 1 of this manual.

If they advise you to return the product to us please pack it carefully and include a note with your name, address, daytime telephone number and details of the fault. If the product is still under guarantee please include proof of purchase.

## **CONTACT US**

**Phone:** 01706 716 116 (Mon-Fri 9am to 5pm)

**Email:** [support@vitinni.co.uk](mailto:support@vitinni.co.uk)

**Address:** Vitinni, Vale Mill (Rochdale) Ltd, Robinson Street, Rochdale, OL16 1TA