



## **Coffee Maker/Grinder with Stainless Steel Travel Cup**

PLEASE READ AND KEEP THESE INSTRUCTIONS FOR FUTURE USE

**MODEL NO:** CM-501E

**SAP Code:** JF07520208

For further assistance, other products and more, join us at:

Website: [www.vitinni.co.uk](http://www.vitinni.co.uk)

Instagram: [@vitinniuk](https://www.instagram.com/vitinniuk)

Facebook: [www.facebook.com/vitinni](https://www.facebook.com/vitinni)

**VITINNI**<sup>TM</sup>

Thank you for choosing our Vitinni Coffee Maker with Stainless Steel Travel Cup. Please read this user manual carefully before use and keep it for future reference. The manufacturer and importer do not accept any liability if the information in these operation instructions is not complied with. If you need any assistance, please contact our customer service team on the details provided on the back page of this manual. Basic safety precautions should always be followed when using this appliance.

## **Safety Instructions**

This appliance is for indoor use only.

This appliance is for domestic use only and should not be used for commercial purposes.

This appliance is not intended for use by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities. Cleaning and user maintenance shall not be undertaken by children.

This is not a toy - children should be supervised to ensure they do not play with the appliance. Keep the appliance and its power cord out of reach of children.

This appliance contains no user serviceable parts. Repairs should only be undertaken by the manufacturer, its service agent or a similar qualified person. If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similar qualified person in order to avoid a hazard.

Keep the power supply cord away from sharp edges and parts of the appliance that may become hot during use.

If the appliance, power supply cord and plug are malfunctioning or they have been dropped or damaged switch off the appliance and discontinue use immediately.

Do not use this appliance with an extension lead or multiple socket adaptor.

Do not use this appliance near an open flame or in moist or damp conditions.

Allow sufficient space around the induction hob for ventilation and heat dissipation. Place on a flat, stable, heat resistant surface a minimum distance of 5 to 10 cm from walls and other items.

Do not leave the appliance unattended whilst connected to the mains power supply. Switch off the mains power supply and remove the plug by hand.

Do not immerse the Coffee Maker, power supply cord or plug in water. Care should be taken to avoid spillage on the electrical components, power cord and plug.

Do not use any accessories or attachments with the appliance that have not been supplied or recommended by the manufacturer.



**Caution:** Hot surface. To avoid injury do not touch the hot or heated surfaces of the Coffee Maker. The heated surfaces and heating element may contain residual heat and still be hot after use. Allow Coffee Maker to cool fully before moving or handling.

Do not open the coffee maker lid or remove the travel mug while a brewing cycle is in progress. Steam and hot water can be released and cause burns or scalds to the user.

Misuse of the appliance could cause injury – do not use the appliance for anything other than its intended use.

Do not overfill the Coffee Maker with water as hot water could overflow during the brewing cycle

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

## Specifications

Rating: 220-240V~ 50/60 Hz

Power: 700-800W



The symbol  on this product or its packaging means that this product and its fan motors may not be treated as household waste. It should be handed to an appropriate collection point for the recycling of electrical and electronic equipment. Contact your local council or household waste disposal service for further information.

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

## Using your Coffee Maker

Before use, check all accessories are complete and that the equipment is not damaged. The Coffee Maker should be cleaned according to the instructions in the Cleaning and Maintenance section. The Coffee maker should be run through a brewing cycle without coffee to clean the internal components before coffee is brewed for the first time. When using the Coffee Maker for the first time a slight odour may be emitted. This is normal and will soon subside.



1. Place the Coffee Maker on a flat, stable and heat resistant surface. Remove the lid from the travel cup and place it onto the drip tray.

2. Place the funnel in the hopper to ensure correct positioning of the funnel assembly. Then place the filter correctly and fill with coffee beans or ground coffee (4 teaspoons of about 15-20 g)

**NOTE:** The beans should not exceed the MAX position indicated by the strainer.



3. Add pure water to the water tank and do not exceed the MAX water level indicated on the scale.



4. Close the top cover and insert the coffee cup level into the water storage plate.

5. Plug the power cord into the socket. The LCD screen,  (coffee powder) and  (coffee bean) buttons will light up.

6. If you are using coffee beans press the  button to begin brewing. This will

automatically grind the coffee beans before beginning the brewing cycle. Press the  button if you are using coffee powder. This setting will not start the Coffee Grinder. Once either button is pressed the indicator light will flash and the brewing cycle will begin.

7. Once the brewing cycle has ended the indicator light will stop flashing. Wait until the indicator light stops flashing to allow any remaining coffee to flow into the cup before removing the cup from the Coffee machine. The Coffee machine will enter standby mode after 5 minutes of inactivity.

8. Firmly attach the lid to the travel mug and ensure it is sealed to avoid spillage. Press the button in the lid to drink from the mug. Press the button in the lid again to close it after drinking. Care must be taken when drinking as the contents will be hot.

**Warning:** Do not operate the coffee grinder without the addition of coffee beans. This will reduce the service life of the machine.

**Caution:** Brewed Coffee is hot. Care must be taken when removing, pouring and drinking the brewed coffee from the machine.

Allow the coffee maker to cool fully before refilling with water for subsequent brewing cycles. If the coffee maker is not cool, steam can be emitted which can cause injury to the user.

Do not operate the coffee maker without water.

**Note:** The brewing process can be interrupted by pressing the  or  button twice

at any time. Press the  or  button again to resume the brewing process.

## Setting the current time and the brewing cycle schedule

To set the current time press the HOUR button until the current hour displays on the screen. Then press the MIN button until the current minute displays on the screen.

To schedule or amend a scheduled brewing cycle press the PROG button. Then set the desired start time using the HOUR and MIN buttons. Once the start time has been entered

press the  button to set a brewing cycle using coffee beans and press the  button for a brewing cycle using coffee powder. "AUTO" will display on the LCD screen to confirm that the scheduled cycle has been set.

To cancel the scheduled brewing cycle disconnect the Coffee Maker from the power supply for 30 seconds.

If the machine has not been disconnected from the power supply, pressing the PROG button will display the settings of the last scheduled brewing cycle.

**Note:** a brewing cycle can only be scheduled once the current time has been set.

## Tips for Great-Tasting Coffee

1. A clean coffee maker is the key to making delicious coffee. Clean the coffee machine regularly according to the "Cleaning and Maintenance" section. Use clear, cold water in the coffee machine.
2. Keep unused coffee powder or beans in a cool, dry place. After opening it for use, seal it tightly and put it in the refrigerator to keep fresh.
3. To get the best taste of coffee, choose the right coffee powder or coffee beans according to your preferences. Medium Roast Coffee beans are recommended.
4. Do not reuse coffee powder or coffee grounds, as this can greatly reduce the taste of the coffee. For the best tasting Coffee, serve just after brewing and do not reheat.

## Cleaning and Maintenance

Unplug the Coffee Maker from the mains power supply and allow to cool fully before performing any cleaning or maintenance.

Used coffee grounds and coffee powder should be disposed of after each use.

1. Remove the filter and funnel chamber from the Coffee Maker and dispose of the used coffee grounds. The drip tray and drip tray cover can be removed and emptied by gently pulling them away from the coffee maker.
2. The filter, funnel chamber, drip tray and drip tray cover can be washed with warm, soapy water and replaced into the coffee maker.
3. Fill the water tank with cool, clean water. Connect the mains power supply and run a brewing cycle on the coffee powder setting to clean the internal components of the Coffee Maker.
4. Disconnect the power supply and allow the coffee maker to cool. Remove any water residue left in the water tank. Wipe the coffee maker with a soft, damp cloth. Allow it to dry fully before storage. Loosely wrap the power supply cord around the base of the coffee maker and store safely in a cool, dry place.

**Caution:** Care should be taken when handling, emptying and cleaning the coffee grinder. The blades within the filter and funnel chamber are sharp.

Do not immerse the Coffee Maker main body in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the Coffee Maker as this could cause damage and detract from the surface finish.

**Note:** To prolong the service life of the machine the underside of the filter should not be submerged in water.

## Removing Mineral Deposits

Depending on the water quality in your area and how often the Coffee Maker is used mineral deposits and limescale can build up inside the Coffee Maker.

Fill the water tank to maximum capacity and add a commercial descaling agent which is suitable for use in Coffee Makers. Follow the instructions supplied with the Commercial Descaling agent and run any brewing cycles required on the Coffee Powder setting.

Ensure the appliance is cycled with cool, clean water after descaling to remove the descaling agent from the Coffee Maker before brewing coffee.

## Guarantee

Our products are guaranteed for a period of 2 years from the date of purchase. Products that develop a fault within this period are covered by our warranty and we will replace defective parts, or where not available the whole product. The warranty does not apply to any defect in the goods arising from fair wear and tear, wilful damage, accident, negligence by you or any third party, use otherwise than as recommended by us, failure to follow our instructions, any alteration or repair carried out without our approval or has been the subject of commercial use. Your statutory rights remain unaffected, in particular any rights you have under the Consumer Rights Act 2015.

If you have a problem with your product within this warranty period please contact our customer services team.

In the event of changes to the specification of a product and we are not able to replace parts, we will replace the whole product within the 2 year guarantee period

For products that fall outside of the 2 year guarantee, we will endeavour to provide spare parts to purchase for as many of the replaceable parts as possible, but cannot foresee specification changes or upgrades to products or parts outside of the initial 2 year period.

### Customer Services:

If you would like further advice or information on your product, ensure you have the SAP code ready and please get in touch with us at Vitinni on the contact options below:

**SAP Code:** JF07520208

**Phone:** 0330 002 1202 (Mon – Fri 9am to 5pm)

**Email:** [support@vitinni.co.uk](mailto:support@vitinni.co.uk)

**Address:** Vitinni, Vale Mill (Rochdale) Ltd, Robinson Street, Rochdale, OL16 1TA