



VITINNITM

Portable Single Induction Hob

PLEASE READ AND KEEP THESE INSTRUCTIONS FOR FUTURE USE

MODEL NO: C20-23

SAP Code: JF07520210

For further assistance, other products and more, join us at:

Website: www.vitinni.co.uk

Instagram: [@vitinniuk](https://www.instagram.com/vitinniuk)

Facebook: www.facebook.com/vitinni

Thank you for choosing our Vitinni Portable Single Induction Hob. Please read this user manual carefully and keep it for future reference. The manufacturer and importer do not accept any liability if the information in these operation instructions is not complied with. If you need any assistance, please contact our customer service team on the details provided on the back page of this manual. Basic safety precautions should always be followed when using this appliance.

Safety Instructions

This appliance is for indoor use only.

This appliance is for domestic use only and should not be used for commercial purposes.

Check that the voltage on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge providing they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be undertaken by children unless they are older than 8 and supervised.

This is not a toy - children should be supervised to ensure they do not play with the appliance. Keep the appliance and its cord out of reach of children less than 8 years.

This appliance contains no user serviceable parts. Repairs should only be undertaken by the manufacturer, its service agent or a similar qualified person. If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similar qualified person in order to avoid a hazard.

Keep the power supply cord away from sharp edges and parts of the appliance that may become hot during use.

If the surface of the hob is cracked, switch off the appliance and discontinue use immediately.

Do not use this appliance with an extension lead or multiple socket adaptor.

Do not use this appliance near an open flame or in moist or damp conditions.

Do not move or carry the Induction hob with cookware on top.

Do not heat cookware when it is empty or overheat cookware.

Do not use on a metallic surface or place metallic objects such as cutlery, utensils lids, cans and aluminium foils on top or underneath the Induction hob.

Allow sufficient space around the induction hob for ventilation and heat dissipation. Place on a flat, stable, heat resistant surface a minimum distance of 5 to 10 cm from walls and other items.

Do not place paper between cookware and the unit. The paper may catch fire.

Do not block the air intake or exhaust vent.

Do not leave the appliance unattended whilst connected to the mains power supply. Allow at least 60 seconds for the Induction Hob to cool after use. Switch off the mains power supply and remove the plug by hand.

Do not use any accessories or attachments with the appliance that have not been supplied or recommended by the manufacturer.

Caution: Misuse of the appliance could cause injury – do not use the appliance for anything other than its intended use

The top surface will remain hot for a period of time after use. Allow to cool fully before moving or handling the Induction Hob.

The hob can affect items which have or attract magnetic fields including (but not limited to): radios, televisions, automatic banking cards and cassette tapes. Keep these items away from the Induction hob whilst it is connected to the mains power supply.

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Specifications

Power Rate: 2000 W

Rating: 220-240V~ 50 Hz

Temperature: 60°C – 240 °C

Max current: 9A

Suitable Cookware for use with Induction Hobs

This induction hob can only be used with induction compatible cookware with a base diameter of 15 to 22 cm. These are usually steel, cast iron, or stainless-steel flat-bottom pans/pots

Operating Instructions

Plug the Induction Hob into a suitable mains outlet. When the mains supply is switched on an acoustic signal will sound, meaning the unit is in standby mode.

Place the suitable cookware onto the centre of the hob. **Do not boil the cookware dry.**

Press the ON/STANDBY switch to turn on the induction hob. The "HEAT" and "TEMP (°C)" indicator lights will blink and an acoustic signal will sound. If you do not press the "HEAT" or "TEMP" keys, the unit will enter the standby mode after 30 seconds.

In standby mode, the LED display will show the letter 'L', to indicate the temperature of ceramic glass plate is lower than 50°C and 'H' if the temperature of ceramic glass plate is higher than 50°C.

When using the induction hob for the first time a slight odour may be emitted. This is normal and will soon subside.

Functions

1. Control with Heat settings

Press the "HEAT" button to control the induction hob with pre-set heat settings. The heat settings can be increased/decreased with the "+"/"-" keys from the pre-set level "5". (Heat settings: 1-10 where 10 is highest).

2. Control with Temperature settings.

Press the "TEMP" button to control the induction hob with pre-set temperature settings. The temperature settings can be increased/decreased with the "+"/"-" keys from the pre-set "120°C" (Temperature settings: 60, 80, 100, 120, 140, 160, 180, 200, 220 and 240°C)

3. Timer Function:

After selecting the control mode (heat settings or temperature settings) press the "Timer" key to set a timer. "0" will appear in the LED display to signify the current timer setting and the timer indicator light will show.

Use the “+” to increase the timer in 5 minute increments up to a maximum of 180 minutes. Use the “-“ to decrease the timer in 1 minute increments. Push and hold the “+”/”-“ keys to quickly increase/decrease the timer setting.

Once the desired time is selected wait for the LED display to return to displaying the HEAT/TEMP setting and indicator light.

The HEAT or TEMP setting can be changed whilst the timer is running however if the control function is changed from HEAT to TEMP or vice versa the timer will reset.

When the timer has expired an acoustic signal sounds and the unit will change to standby mode. To cancel the TIMER, press the ON/STANDBY key twice or change the control function.

Note: Once the ON/STANDBY button has been pressed or the timer has expired, the fan will run up to a maximum of 60 seconds to cool the induction hob before switching off.

The maximum load for the cooking plate is 6 kg. Exceeded the maximum load will damage the induction hob.

When using the Induction hob for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Induction hob.

Maintenance

Disconnect the plug from the power supply and wait for the unit to cool fully before cleaning. Clean after each use to avoid discoloration or stains.

Wipe down the unit using a dish washing agent and a damp cloth. Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.

Do not use fuel, paint thinner, scrubbing brushes or polishing powder to clean the induction stove. Do not immerse the induction hob in water or run water over the top of the induction hob.

Storage

When the unit is not in use, it should be stored safely: turn the unit off, unplug the power cord from the outlet, wait for the burner to cool completely, then loosely wrap the extra cord around the bezel. Store the unit in a cool dry place.

Trouble Shooting & Error Code List

If the LED-display shows an error code, please refer to the below table.

Error Code	Cause and Solution
The unit is in standby mode, but the LED display shows "--" and the unit makes a beeping sound	You are using cookware that is not Induction suitable (without a magnetic bottom) or the diameter of the bottom is less than 15cm. Please use induction suitable cookware with a flat, magnetic base, such as iron or cast iron cookware that is larger than 15cm.
E01	Voltage is under 145V
E02	Voltage is over 275V
E03	The accessory and spare parts are damaged; please contact the manufacturer for troubleshooting, repair and adjustment.
E07	The appliance is too hot. The cooking temperature is over 240C. After the unit has cooled down (for at least 30 mins), the unit will automatically switch to standby mode. Press the ON/OFF button to restart the unit.
E08	The accessory and spare parts are damaged; please contact the manufacturer for troubleshooting, repair and adjustment.



The symbol  on this product or its packaging means that this product and its fan motors may not be treated as household waste. It should be handed to an appropriate collection point for the recycling of electrical and electronic equipment. Contact your local council or household waste disposal service for further information.

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Guarantee

Our products are guaranteed for a period of 2 years from the date of purchase. Products that develop a fault within this period are covered by our warranty and we will replace defective parts, or where not available the whole product. The warranty does not apply to any defect in the goods arising from fair wear and tear, wilful damage, accident, negligence by you or any third party, use otherwise than as recommended by us, failure to follow our instructions, any alteration or repair carried out without our approval or has been the subject of commercial use. Your statutory rights remain unaffected, in particular any rights you have under the Consumer Rights Act 2015.

If you have a problem with your product within this warranty period please contact our customer services team.

In the event of changes to the specification of a product and we are not able to replace parts, we will replace the whole product within the 2 year guarantee period

For products that fall outside of the 2 year guarantee, we will endeavour to provide spare parts to purchase for as many of the replaceable parts as possible, but cannot foresee specification changes or upgrades to products or parts outside of the initial 2 year period.

Customer Services:

If you would like further advice or information on your product, ensure you have the SAP code ready and please get in touch with us at Vitinni on the contact options below:

SAP Code: JF07520210

Phone: 0330 002 1202 (Mon – Fri 9am to 5pm)

Email: support@vitinni.co.uk

Address: Vitinni, Vale Mill (Rochdale) Ltd, Robinson Street, Rochdale, OL16 1TA