

# VITINNI™

## VITINNI™ POPCORN MAKER

### USER MANUAL

Model Number: PM3400

SAP Code: JF07524001



**FOR DOMESTIC USE ONLY**

**PLEASE READ INSTRUCTIONS CAREFULLY BEFORE USE**

**RETAIN THIS MANUAL FOR FUTURE REFERENCE**

## **SAFETY INSTRUCTIONS**

**Please read these instructions thoroughly before use and keep them in a safe place for future reference. Include these instructions if you pass the appliance to a third party.**

**Failure to follow these instructions can result in damage to the appliance and harm to the user. No liability is accepted if these instructions are not followed or if damage results through improper use. Any attempt to alter the appliance or not follow instructions may result in harm and will also void any warranty.**

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capacities or lack of experience or knowledge **only if** they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

This appliance should be stored out of the reach of children. Keep packaging away from children.

Please handle with care.

This appliance is intended for domestic use only; it is not suitable for commercial use.

Suitable for indoor use only.

The appliance must only be used for its intended purpose.

Check that the voltage shown on the appliance corresponds with the local network before connecting to the mains supply.

Check the cord and appliance before each use to ensure it is undamaged and in full working order. Do not use if the power cord, plug or any part of the appliance show signs of damage.

Never leave the appliance unattended whilst in use.

For use on a stable, heat resistant surface.

Do not move the appliance whilst it is in use.

Ensure the appliance has cooled fully after use before cleaning, servicing or storing.

Ensure the appliance is turned off and unplugged during cleaning and after use.

Store the appliance in a clean and dry place away from extreme temperatures and moisture. Do not store in direct sunlight.

Keep the appliance and its power cord away from liquids, heat sources and sharp edges.

Do not allow the appliance, cord or plug to get wet; never immerse in water or any other liquid. Do not operate the appliance with wet hands.

Ensure the power cord is kept away from hot surfaces, including parts of the appliance that may become hot during use.

Do not pull the cord to disconnect from the socket; always switch off the appliance, grasp the plug firmly and pull to disconnect.

This appliance contains no user serviceable parts. Do not try to repair the appliance yourself as this may cause harm and could also void your warranty.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons.

Only use manufacturer-approved accessories and spare parts.

Use of an extension cord is not recommended.

Do not operate the appliance by means of an external timer or separate remote control system.



## **PRODUCT SPECIFICATION**

Voltage: 220-240V

Frequency: 50Hz

Wattage: 1200W

## **DIAGRAM OF PARTS**

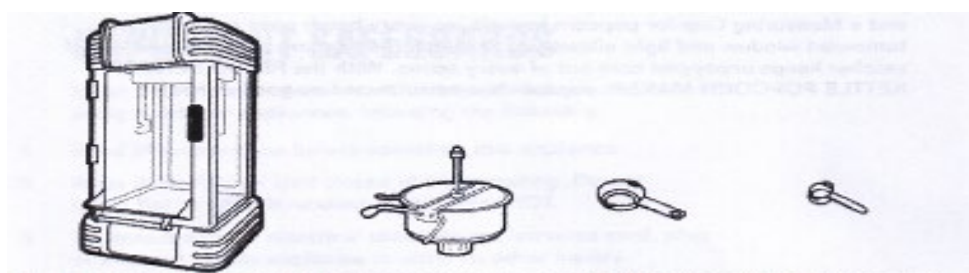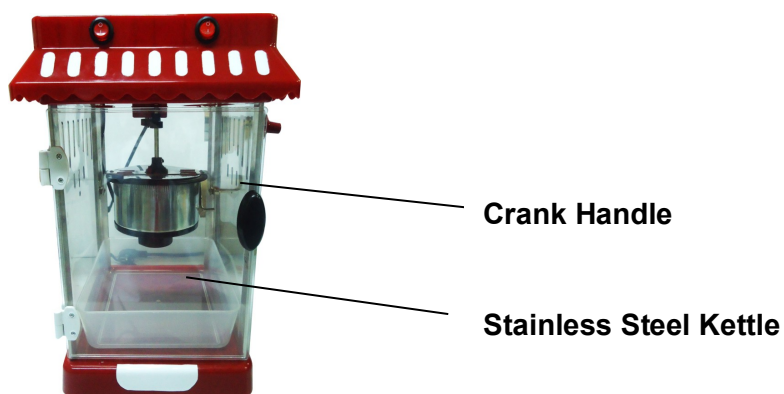

**(B) Kettle**

**(C) Kernel Measuring Cu Spoon ( $\frac{2}{3}$ tbsp)**

**( $\frac{1}{2}$  cup = 2 oz)**

**(D) Oil Measuring**

## (A) Main Unit

### **BEFORE FIRST USE**

Before first use, clean the inside of the unit by wiping with a moist, non-abrasive sponge, towel or cloth and then wipe with a non-abrasive dry towel. Wipe down the inside of the kettle and be sure it is properly placed in the brackets before starting.

**Step one:** remove all packaging.

**Step two:** ensure popcorn maker is placed on a flat surface near to mains.

**Step three:** plug in the appliance, making sure switch is in OFF position.

**Step four:** make sure kettle is properly secured in support brackets and that the kettle motor is plugged in.

**Step five:** turn to the ON position by pressing the switch on the top of the machine. Allow the appliance to run for 3-5 minutes to heat up the kettle.

**Step six:** turn the unit OFF.

**Step seven:** use the oil measuring spoon supplied with your popcorn maker to add  $\frac{2}{3}$  tablespoon of your favorite popcorn cooking oil to the kettle. For best popping results, it is suggested to use light vegetable oil.

**Step eight:** add  $\frac{2}{3}$  cup (2 oz) of popcorn kernels to the kettle using the supplied kernel measuring cup.

**Step nine:** turn the unit ON and close the door; you will hear the popping begin. Fresh, hot popcorn will begin to burst out of the flip lids on the kettle.

**Step ten:** once the kernels have stopped popping, tip the kettle using the red knob on the crank handle to release the popcorn.

**If your popcorn maker begins to smoke during cooking, it may be due to grease build up. In order to reduce smoking, make sure that you clean the inside of the kettle between uses.**

### **RECIPES**

Enjoy your freshly popped corn in a variety of ways:

- For regular 'theater style' popcorn, add butter and salt.
- Add a pinch of sugar and salt to popcorn for a sweet kettle corn taste.
- For flavored popcorn, add seasoning from any gourmet popcorn seasoning kit.
- Try some of these fun recipes

**NOTE:** 1 Gallon = 16 Cups

#### **PARMESEAN POPCORN**

##### **Ingredients**

- One gallon of popped corn
- 3 Tsp garlic powder
- 3 onions, finely chopped
- $\frac{1}{2}$  Tsp cracked black pepper
- 1 Tsp sea salt
- 1 Cup parmesan cheese, grated
- 3 Tbsp olive oil, heated

##### **Instructions**

Pop corn kernels using the popcorn maker as previous instructions.

Combine garlic powder, onions, pepper, sea salt and parmesan cheese. Set aside.

In a large mixing bowl drizzle hot olive oil over popcorn (**caution must be taken when using hot oil**).

Toss until well coated.

Slowly add in dry ingredients whilst continuously stirring the popcorn until well coated.

## TRADITIONAL POPCORN BALLS

### Ingredients

- 1/2 cup popcorn
- 1/2 cup corn syrup
- 1/2 cup granulated sugar
- 1/2 teaspoon salt
- 1 stick of butter, softened

### Instructions

Pop corn kernels using the popcorn maker as previous instructions.

Mix corn syrup, sugar and salt together in pot and sugar dissolve over medium heat for approx. 3 minutes.

Add popcorn to pot, stirring and tossing consistently until popcorn is done.

Remove from heat.

Use softened butter to create balls whilst popcorn mixture is still warm.

Wrap individual balls in plastic wrap, tie and store at room temperature.

## CHUNKY MONKEY

### Ingredients

- 1 gallon popcorn
- 1 12-oz bag chocolate chips
- 1 12-oz bag peanut butter morsels
- 4.2 oz bag banana chips, broken into small pieces
- 11-oz bag peanuts

### Instructions

Pop corn kernels using the popcorn maker as previous instructions.

Melt chocolate chips and peanut butter morsels over stove, as packaging recommends.

Toss together popcorn and banana chips.

Spread popcorn and banana chip mixture evenly over cookie sheet.

Drizzle melted chocolate and peanut butter mixture over popcorn and banana chips.

Sprinkle peanuts over chocolate and peanut butter mixture.

Allow to cool.

When chocolate and peanut butter has hardened break up the Chunky Monkey into pieces.

## POPCORN PEPPERMINT BARK

### Ingredients

- 1 gallon popped corn
- 1 12-oz bag milk or dark chocolate chips
- 1 1/4 cup peppermint sticks, crushed

### Instructions

Pop corn kernels using the popcorn maker as previous instructions.

Melt chocolate chips over stove, as packaging recommends.

Spread popcorn evenly over lined baking sheet.

Drizzle melted chocolate over popcorn.

Sprinkle crushed peppermints over chocolate.

Allow to cool.

When chocolate has hardened, break up Popcorn Peppermint Bark into pieces.

Can be stored in plastic freezer bags.

### CLEANING AND CARE

Before cleaning, please allow the appliance to cool down completely and ensure it has been unplugged.

The appliance or accessories are not dishwasher safe; do not put any part of the appliance into the dishwasher.

Use a slightly damp, non-abrasive sponge, towel or cloth to wipe down the inside and outside of main unit, then wipe with a non-abrasive towel to dry.

Unplug kettle motor and remove kettle from support brackets. Remove Kettle from main unit. After removing kettle fill 2/3 of kettle with hot, soapy water. Let the kettle sit for 15-20 minutes to cut the grease. If necessary, use the scrubber side of a cleaning sponge to scrub inside of Kettle. Rinse inside carefully and dry. Wipe outside of Kettle with damp cloth and dry.

Do not use any abrasive detergents or alcohol-based cleaning products as this may damage the appliance or its accessories.

Once fully dry, keep all accessories together for ease of use next time, and store the appliance in a clean, dry place away from extreme temperatures and moisture.

### ***Environmental protection:***



To avoid environmental or health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

## **GUARANTEE AND SERVICE**

Your new VITINNI™ product comes with a 12 month warranty.

Defects affecting product functionality may be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. This does not apply to damage or wear sustained by improper use of the accessories or the appliance. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

## **CUSTOMER SERVICE**

If you wish to return your product for a full refund the item must be unused, in its original packaging and returned in a sellable condition. Please contact our Customer Service team within 24 hours who will be able to assist with your enquiry

The product is not user-serviceable; do not attempt to repair it yourself as this may put you at risk of harm from live components, and will also void your warranty.

If the appliance is not working please read the instructions and check the plug, fuse, and circuit breaker. If this doesn't solve the problem please ring our Customer Service team, as they may be able to offer advice.

If you ring Customer Service, please have the SAP code ready to help us assist you with your enquiry. This can be found on page 1 of this manual.

If they advise you to return the product to us please pack it carefully and include a note with your name, address, daytime telephone number and details of the fault. If the product is still under guarantee please include proof of purchase.

## **CONTACT US**

**Phone:** 01706 716 116 (Mon-Fri 9am to 5pm)

**Email:** [support@vitinni.co.uk](mailto:support@vitinni.co.uk)

**Address:** Vitinni, Vale Mill (Rochdale) Ltd, Robinson Street, Rochdale, OL16 1TA