

VITINNITM

VITINNI RACLETTE GRILL WITH CREPE & PANCAKE PLATE

USER MANUAL

Model Number: GTH-004T

SAP Code: JF07518001



FOR DOMESTIC USE ONLY

PLEASE READ INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY

RETAIN THIS MANUAL FOR FUTURE REFERENCE

YOUR SAFETY, AND THE SAFETY OF OTHERS, IS IMPORTANT TO US

Please read these instructions thoroughly before use and keep them in a safe place for future reference. Include these instructions if you pass the appliance to a third party in future.

Failure to follow these instructions can result in damage to the appliance and harm to the user. No liability is accepted if these instructions are not followed or if damage results through improper use. Any attempt to alter the appliance or to not follow instructions may result in harm and will also void any warranty.

Safety instructions:

This appliance should be stored out of the reach of children, and should not be used by children without adult supervision, or by persons with a lack of experience or knowledge. Children aged 8 and above, and persons with reduced physical, sensory or mental capacities, can use this appliance provided they are instructed in the use of this appliance in a safe way, understand the hazards involved, and are supervised at all times.

Never leave the appliance unattended while in use; always turn off and unplug if you are leaving the work surface. Ensure it is turned off and unplugged during cleaning or after use, and store it away safely in a clean, dry place with all the accessories.

Do not allow children to play with any part of this appliance; keep the appliance and all the packaging e.g. plastic bags, boxes, polystyrene etc. out of their reach as there is a danger of suffocation. Cleaning and user maintenance should not be done by children without supervision of a capable adult.

Only suitable for indoor use in a clear, safe space; keep away from liquids, flames, heat sources and flammable material to avoid risk of damage or electric shock.

Make sure your electricity supply matches the voltage shown on the appliance before plugging in. To avoid a circuit overload, do not operate another high voltage appliance on the same circuit.

To avoid electric shock, do not let the appliance, cord or plug get wet, and never immerse in water or any other liquid. If the appliance is damp, dry thoroughly before use. Never touch with wet hands.

This appliance is intended for domestic household use only, and indoors only – it is not suitable for commercial use or for use outdoors. It must only be used for its intended purpose.

Ensure the power cord is kept away from hot surfaces and parts of the appliance; check the cord and appliance before each use to ensure it is unobstructed and in full working order. Never yank the cord to disconnect from the socket; always grasp the plug firmly and pull to disconnect.

Do not use the appliance if the power cord, plug or any part of the appliance shows signs of damage, or if the appliance is dropped or working incorrectly. Never try to repair the appliance yourself as this may cause harm and could also void your warranty. Call our Customer Services on the details contained in this manual and we will endeavour to help as best we can. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Never connect this appliance to an external timer switch or separate remote-control system, as this may result in fire or damage. Only use manufacturer-approved accessories and spare parts. If an extension cord is necessary, a 10 amp cord should be used, as cords rated less may overheat. Ensure the extension cord is arranged so that it cannot be pulled or tripped over.

The heating element has been slightly greased and as a result the raclette may smoke slightly when switched on for the first time. After a short while, this will cease – switch the raclette on for 10 minutes without any ingredients before the first use to remove any smoke or smell from this process.

Product Specification:

Voltage: 220-240V; 50Hz; 1200W

Diagram of parts:



1. Grill plate

2. Mini pans

3. Temperature switch

NOTICE: please follow the cleaning instructions at the end of this manual, as the raclette and its accessories are not dishwasher safe, and must be hand-washed in hot, soapy water.

Before first use:

Ensure that there is plenty of room around the raclette, as it will get hot on all sides and requires adequate ventilation. Also make sure that the raclette is placed on a stable, heat-resistant surface – do not place it on untreated wood.

Grill:

- Place the raclette in the centre of the table.
- Cut the ingredients into small pieces – the smaller the piece, the faster the cooking time. Keep your selection of chopped ingredients on plates or boards around the raclette ready for cooking.
- Turn on the raclette using the temperature switch at the front – the control light will illuminate and the raclette will begin to heat up.
- Once the raclette has reached the required temperature, the control light will go off and you can begin cooking.
- Grease the mini pans before adding ingredients – these are perfect for frying eggs, potatoes, peppers and also sorts of mini mixed dishes.
- Meat and vegetable can be grilled on the upper grill plate.

Cleaning and care:

Before cleaning, please allow the appliance to cool down completely and ensure it has been unplugged.

The accessories are not dishwasher safe – do not put any part of this appliance into the dishwasher.

For the surfaces of the raclette, clean with a damp cloth – never immerse in water, and ensure all parts are fully dried.

For the mini pans, wash in hot, soapy water and dry thoroughly.

Do not use any abrasive detergents or alcohol-based cleaning products as this may damage the appliance or its accessories.

Once fully dry, keep all accessories together for ease of use next time, and store the appliance in a clean, dry place away from extreme temperatures and moisture.

Environmental protection:



To avoid environmental or health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

GUARANTEE AND SERVICE

Your new VITINNI™ product comes with a 12 month warranty.

Defects affecting product functionality may be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. This does not apply to damage or wear sustained by improper use of the accessories or the appliance. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

CUSTOMER SERVICE

If you wish to return your product for a full refund the item must be unused, in its original packaging and returned in a sellable condition. Please contact our Customer Service team within 24 hours who will be able to assist with your enquiry

The product is not user-serviceable; do not attempt to repair it yourself as this may put you at risk of harm from live components, and will also void your warranty.

If the appliance is not working please read the instructions and check the plug, fuse, and circuit breaker. If this doesn't solve the problem please ring our Customer Service team, as they may be able to offer advice.

If you ring Customer Service, please have the SAP code ready to help us assist you with your enquiry. This can be found on page 1 of this manual.

If they advise you to return the product to us please pack it carefully and include a note with your name, address, daytime telephone number and details of the fault. If the product is still under guarantee please include proof of purchase.

CONTACT US

Phone: 01706 716 116 (Mon-Fri 9am to 5pm)

Email: support@vitinni.co.uk

Address: Vitinni, Vale Mill (Rochdale) Ltd, Robinson Street, Rochdale, OL16 1TA